

[English]

METAVISION™ Intelligence suite Plugin Setup Guide

The following settings are required to use the Metavision™ Intelligence suite application with SilkyEvCam (VGA) / SilkyEvCam HD.

[Metavision™ Intelligence install]

0. Access the PROPHESEE website below, enter the required information, and install Metavision™ Intelligence suite according to your PC's OS.

<https://docs.prophesee.ai/stable/installation/index.html>

※Please check the required OS on the above site.

[SilkyEvCam (VGA) / SilkyEvCam HD Plug-in install]

1. Download the plug-in setup file (zip) from the CenturyArks download site below.
*Please download the file according to the version of Metavision™ Intelligence suite you are using.
<https://centuryarks.com/en/download/>

2. Download file and startup confirmation (common to SilkyEvCam (VGA) / SilkyEvCam HD)

2-1. [Ubuntu]

- SilkyEvCam_Plugin_Installer_for_ubuntu_v??.?.zip

Please refer to the "readme.txt" file included in the above file for the setup procedure.

- Connect SilkyEvCam (VGA) / SilkyEvCam HD to your PC with a USB cable, start metavision_studio and check that streaming images are output.

> metavision_studio [return]

2-2. [Windows]

- SilkyEvCam_Plugin_Installer_for_win64_v??.?.zip

Please refer to the "readme.txt" file included in the above file for the setup procedure.

- Connect SilkyEvCam (VGA) / SilkyEvCam HD to your PC with a USB cable, start metavision_studio.exe from the application menu, and check that the streaming image is output.

>metavision_studio.exe

Manufacturer: CenturyArks Co., Ltd.

Location: 3-13-1 Nishi-Azabu, Minato-ku, Tokyo 106-0031 TEL: +81-3-6804-5752

Web site: <https://www.centuryarks.com/>

Product Inquiries Email: ca-qa@centuryarks.com